


### Technische Daten und Hinweise


- ▶ 2 Haupt-LEDs für Fahrmodus
- ▶ 2 Bremslicht LEDs
- ▶ Bremslicht und Standlicht betrieben über 2 Stück AAA Batterien
- ▶ Geprüft und zugelassen gem. StVZO
- ▶ Die Rückstrahlerfläche des Rücklichts muss senkrecht zur Fahrbahn ausgerichtet sein.

### Anschluss des Rücklichts


1

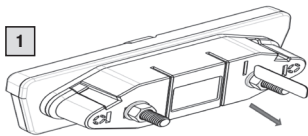

2

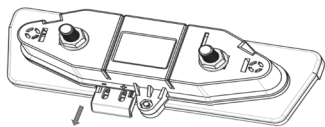

3

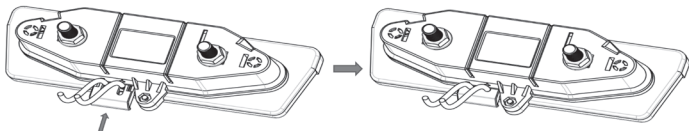


1. Entfernen Sie die Batterie-Trennfolie an der Hinterseite des Rücklichts
2. Ziehen Sie die + und – Schiebervorrichtung aus dem Gehäuse
3. Führen Sie die Kabel in die dafür vorgesehenen Löcher ein und drücken die Kabelaufnahme wieder in das Gehäuse.

### ACHTUNG:


Zum Aktivieren der Bremslicht-LEDs muss eine kurze Fahrstrecke mit eingeschaltetem Frontscheinwerfer zurückgelegt werden.

### Auswechseln der Batterien


1

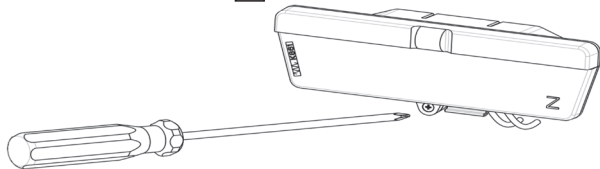

2

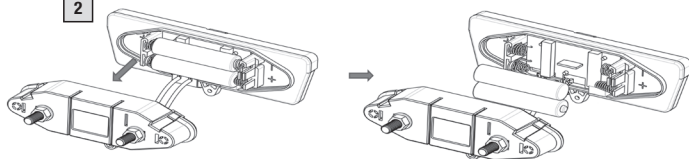

3

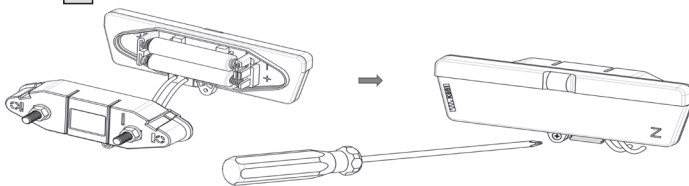

1. Wenn die grüne Lampe im oberen Gehäuse des Rücklichtes aufleuchtet, zeigt sie an, dass die Batterien ausgewechselt werden müssen. Hierzu lösen Sie die Schraube unterhalb des Reflektors (Abb. 1)
2. Ziehen Sie dann die Kunststoffabdeckung vom Rücklicht und ersetzen Sie die Batterien (Abb. 2)
3. Setzen Sie das Gehäuse wieder auf das Rücklicht und schrauben Sie es sorgfältig wieder an. (Abb. 3)



Batterien gehören nicht in den Hausmüll. Als Verbraucher sind Sie gesetzlich verpflichtet, gebrauchte Batterien zurückzugeben.




# Instruction Manual for »R 99 B« art.-nr.: 070-50119 Rearlight with Brakelight-function

## Technical facts and references


- ▶ 2 Main-LEDs for riding-modus
- ▶ 2 Brakelight LEDs
- ▶ Brake and standlight run by 2 pcs. of AAA-batteries
- ▶ Vehicular Optical test requirement: German Standard
- ▶ The reflection area of the rearlight must be adjusted vertically to the roadway

## Connecting the rearlight


1

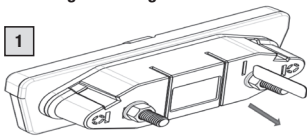

2

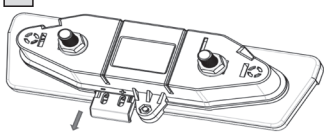

3

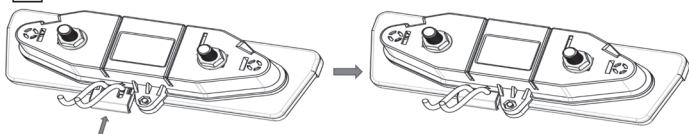


1. Remove the battery protection plate from the backside of the rearlight housing.
2. Pull out the the cable connector plate (+ and -)
3. Insert the designated cables into the particular port and push then the slide-appliance into the housing again

## Attention:


In order to activate the brake light LEDs switch on the front light and drive a short distance.

## Exchanging the batteries


1

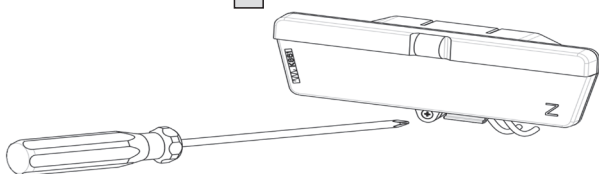

2

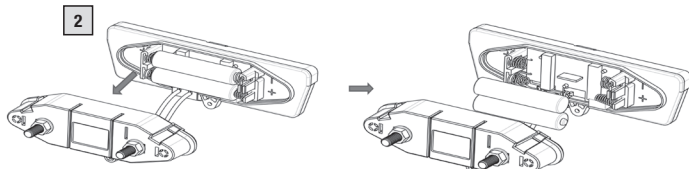

3

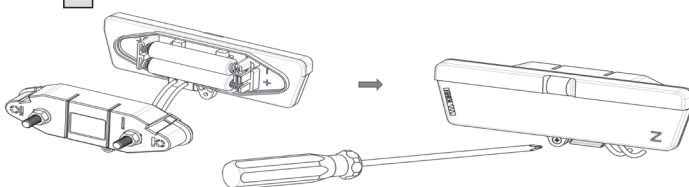

1. The green light on the top side shows that the battery is low. For replacing the new batteries unscrew the screw as in picture 1
2. Pull out the backhousing of the light and replace the batteries (Picture 2)
3. Assemble back the housing by fixing the screw again. (picture 3)



Batteries do not belong to the domestic waste. As a consumer you have the obligation to bring the empty batteries back.